

Remote for RF Dimmer

 
 
REMOTE RF DOT 1Z WHITE

Radium

Date: 09.06.2021

Important: Read All Instructions Prior to Installation

Function introduction

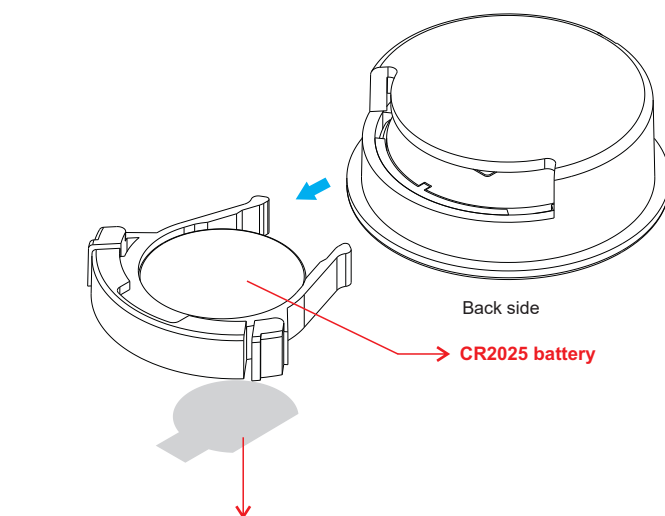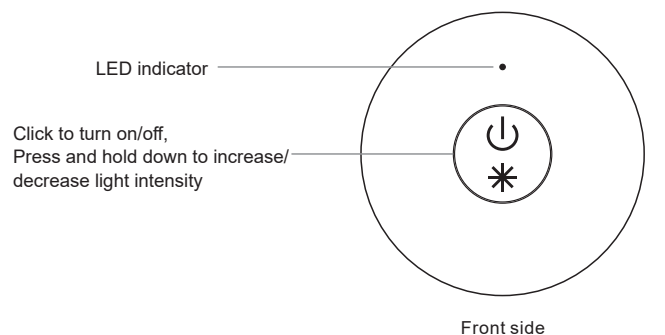

Note: Before the first use, please remove the protective film on the battery.

Product Data


Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power Supply	3V(CR2025 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	Φ38. 5x14.8mm

- Control 1 zone
- Single color remote
- Memory function
- Compatible with all universal series RF dimmers
- 1 dimmer can be paired by max. 8 different remotes.
- Waterproof grade: IP20

Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

 Pair with RF Dimmer

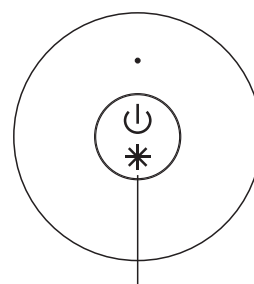

Step 1: Do wiring the RF dimmer according to wiring diagram (please refer to the instruction of RF dimmer that you would like to pair with).



 
Step 2: Click the "Learning Key" button on RF dimmer or re-power on the dimmer three times continuously to set it into pairing status.

Step 3: Click the button on the remote, LED lights connected with the RF dimmer flicker once means the dimmer is paired with the remote successfully.


Note: one dimmer can be paired with max. 8 remotes.

Install the remote control on the wall

1. Fix the magnet in the chute of the back shell

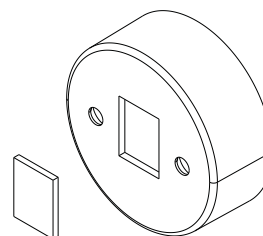

 2. Screw the back cover onto the wall

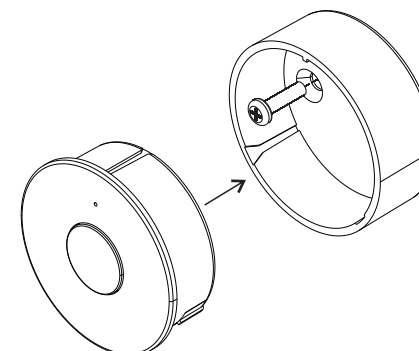

3. The back cover can suck the remote control on the wall.

