



Read all instructions before using or installing the product. Keep for future reference. Include the user manual when passing the product on to third parties.


- The product is designed to control one or several controllers for RGBW strips which can be grouped into 4 zones.
- Up to 30 lighting devices can be paired with the product.
- The product only works with the LMZA4377 controller.
- Protocol: ZigBee 3.0
- Transmission frequency: 2.4 GHz
- Transmission line: 6 dbm
- Transmission range (free field): 30 m
- Operation voltage: 3 V DC (CR2025)
- Protection rating: IP20 (Do not expose to moisture)

Product introduction


- Status LED**
- Brightness up button**
- On/Off button**
- CCT temperature button**
- Brightness down button**
- RGB button**
- Scene button**
- RGB color changing mode button**
- Zone buttons (1-4)**

Usage notes:

- 2: Press and hold to increase the brightness.
- 3: To switch on or off the selected zone (or last selected zone).
- 4: Press repeatedly to select from 5 colour temperatures (from warm white, neutral white to cold white).
- 5: Press and hold to decrease the brightness.
- 6: Press once to select a colour change programme. Press and hold to set individual colour.
- 7: Using the RGB button (6) and the brightness buttons (2 and 5) you can set a desired scene for each zone (1-4) individually. To save or overwrite an existing scene, press and hold the scene button (7) until the light briefly goes "off" and then "on" again.
- 8: Press once to start the automatic colour changes. Press again to pause the function. Press and hold to increase the colour changing speed; press and hold again to decrease the speed.
- 9: The buttons allow up to 4 zones to be operated differently. Up to 30 controllers can be paired with each zone. All controllers in the same zone run synchronously.

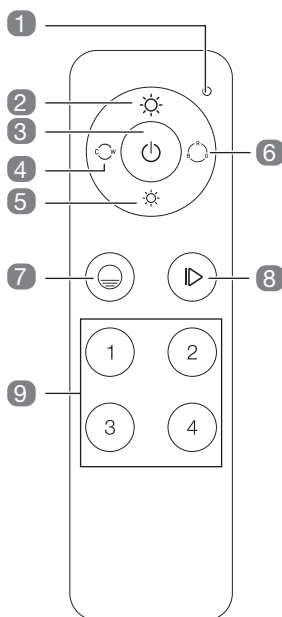


Installing the magnetic holder

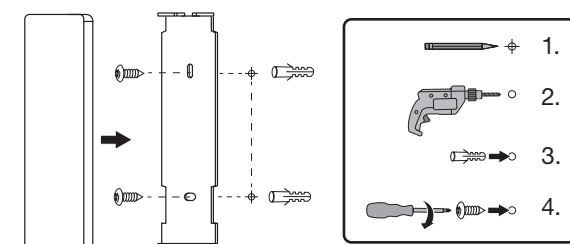

Installing/replacing the battery

Remove the insulation film from the battery before first use.



- The product requires a CR2025 (3 V) coin battery.
- Slide open the cover for battery installation/replacement.
- Make sure the polarity (+/-) is correct when installing the battery (with the "+" side facing upward).

Pairing the controller to a zone of the remote control (without using a ZigBee hub)

1 Disconnect the cable connection 4 times in succession between the controller and driver unit.

4x

2 Check the LED strip light. It flashes twice when ready for pairing.

3 Place the product near the controller (< 10 cm) and select a zone you want to pair with it. Press and hold the On/Off button **3** and the corresponding zone button **9** together for at least 3 seconds to start pairing.

< 10 cm

1/2/3/4

3 SEC

4 Check the LED strip light. It flashes twice slowly, then turns off for a few seconds, and finally flashes twice slowly when pairing is successful.

slow (2x) OFF for a few seconds slow (2x)


The pairing mode has started when the status LED **1** flashes quickly for approx. 5 seconds.

5 sec.


Pairing the product to a ZigBee hub


In a ZigBee network, all devices that are intended to communicate with each other must be paired with the same ZigBee hub.


If you want to be able to control your controller with a Zigbee hub and the remote control, you need to pair the controller and the remote control with the same Zigbee hub according to the steps below. After you paired both devices to the hub, you also need to additionally pair the remote control with the controller by following the steps in the chapter "Pairing the controller to a zone of the remote control".



1
Start device search on ZigBee hub.

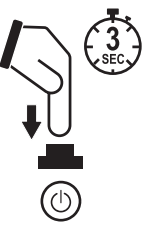

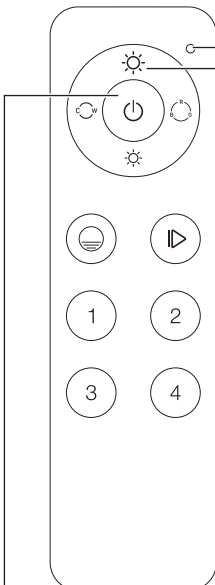2
Follow the steps in the chapter "Resetting the product" to initiate the pairing mode.
If the product is already paired with a controller, it must be reset. Pairing with a ZigBee hub is otherwise not possible.

3
Press and hold the On/Off button **3** for about 3 seconds.




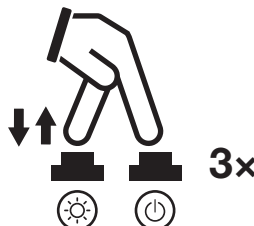
4
Check the status LED **1**. The product is in the settings mode once it illuminates.




5
Press the brightness up button **2** once to start pairing.

The status LED **1** keeps flashing for approx. 180 seconds while the product tries to pair with a ZigBee hub.


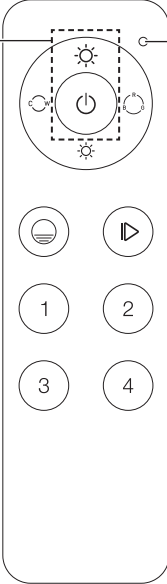
6
Check the status LED **1**. It flashes 3 times quickly and then goes out when pairing is successful.


Resetting the product

The product will be reset to factory defaults with all user's settings deleted.

1
Press and release both brightness up button **2** and On/Off button **3** 3 times consecutively.


2
Check the status LED **1**. It flashes 3 times when reset is done.

When the product is already in the default settings, it immediately goes to the pairing mode. The status LED flashes for approx. 180 seconds, waiting for pairing with a ZigBee hub.

To cancel the pairing mode, press any button.



SIMPLIFIED EU DECLARATION OF CONFORMITY
Hereby, Radium Lampenwerk GmbH declares that the radio equipment type LMZA4536 REMOTE ZGB RGBW 4ZONE is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address: <https://www.radium.de/LMZA4536>



Old appliances must not be disposed of with residual waste. They can be handed in at public collection points run by waste disposal companies. Used batteries and lamps that can be removed from the old appliance without causing damage must be separated from the old appliance before being handed in to a collection point. Distributors are obliged to take back this product free of charge in accordance with Section 17 (1) and (2) of the German Electrical and Electronic Equipment Act. End users of waste equipment are responsible for deleting personal data from the waste equipment.

Radium Lampenwerk GmbH
Dr.-Eugen-Kersting-Straße 6
51688 Wipperfürth
GERMANY

www.radium.de



Scan for
more
product
information.